
SERVICE MANUAL HARP

CODE: 00ZCE1601MSME

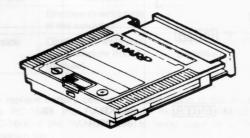

MODEL CE-1601 M

1. Specifications

Product name:

Model: Storage:

Power source for backup: Cell life:

RAM module CE-1601M 64 K-bytes

3V···(DC); lithium cell (CR2032) (1) When module is in the computer: about 5 years; when not in the computer:

about 20 months.

(when kept at 20°C/68°F. Life time varies depending on module usage and

environment.)

Temperature: Dimensions:

0°C to 40°C/32°F to 104°F Height 8.5mm/(11/32")

Length 40.9mm/(1-5/8") Width 42.8mm/(1-11/16")


Accessories supplied:

15g (including the cell) Case, cover labels (3), space cover,

lithium cell (inserted in the module),

operation manual.

2. Parts identification

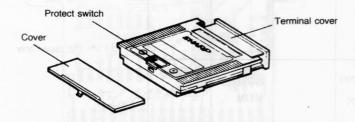

Protect switch

When the switch is set to the side marked with a "." mark, the RAM module is write prohibited so that the RAM contents may not be erased and changed.

When the switch is set at the other side, the write protect is released. To prevent incidental power off after the write protect is set, a label is attached to the switch area.



3. Operation

The CE-1601M must be mounted in the PC-1600 memory slot S2. If mounted in the memory slot S1, the computer may not perform properly or data may not be written properly in the RAM module. There are following four ways of using the RAM module.

- A) The entire 64KB area used as a RAM file.
- B) A 32KB area is used for a program memory and the remaining 32KB area for a RAM file.
- A 32KB area is used for an expansion memory and the remaining 32KB area for a RAM file.
- D) A 32KB area is used for a program memory and an expansion memory, and the remaining 32KB area is used for a RAM file.

4. Module installation

	3860	Mode	Installation command	PER E	Wanted .
1	A	To use the entire module as RAM file	① TITLE ENTER	64KB RAM module	
				User size	Directories
			② NEW 0 ENTER Because the contents of the expansion memory and data are all cleared, they must be saved in another memory device if they are to be used again.	61KB (62,464B)	48
			③ INIT "S2:", "F" ENTER		
AND THE PERSON	В	Program memory BASIC test area = 32.571 bytes Reserve program area = 189 bytes RAM file	④ INIT "S2:", "P" ENTER		9
	С	Expansion memory Expansion memory (S0) area increases 32.768 bytes more. Rest of memory RAM file			48 as the CE-1600
	D	Program memory Program memory	4 INIT "S2:", "P", In. ENTER "n" represents the program memory size. Odd number of KB from 2 to 3/2 (32 - n) KB represent the size of	L is used for RAM file.	
100	Y Y K	Rest of memory ··· RAM file	expansion memory.	MAH H-BO	eman but

NOTES:

(1) It is not possible to change the RAM module mode, if there is data already existing in the module. One of the following operations is required in order to change the RAM module mode.

ODelete all files using the KILL command.


OType TITLE "S2:" ENTER NEW 0 ENTER to clear the contents of program memory.

Type TITLE ENTER NEW ENTER to clear the contents of

the expansion memory.

5. Memory map

(Map seen from the SC7852)

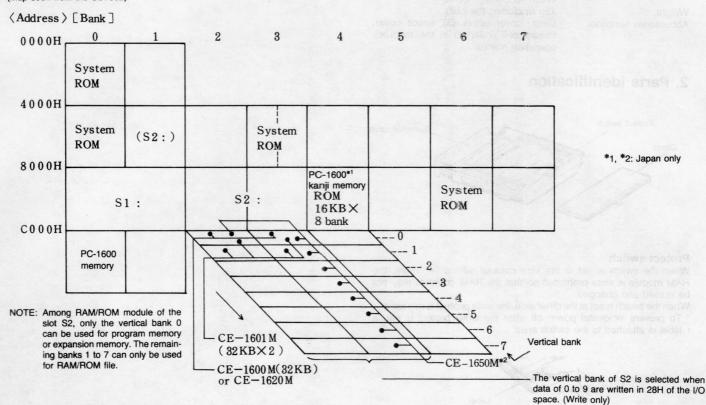

6. Precautions

- (1) When the computer is reset while accessing a file in this RAM module, NEWO? may be displayed. Push the CL key to clear the display. The contents of the main memory and RAM module memory are still retained in this case.
- (2) See the description below for the function of the write protect switch.

DIPSW	Function	Note	
3	Enables to write data in the module.	10 0 0	
• side	Disables to write data in the module (ROM module).	Above A) and B) are permitted.	


(3) To replace battery cell without connection of the AC adapter to the PC-1600, the RAM module must be removed from the PC-1600 if the RAM module is being used as a RAM file or program file.

After replacing with fresh battery, all reset the PC-1600 before mounting the RAM module.


Because program or data within the expansion memory are cleared after replacing battery, the memory contents must be saved on the floppy disk or cassette tape if it should be used again.


7. Service precautions managed appeals a

- (1) All parts must be closely attached on the PWB.
- (2) Pin of the dip switch soldered must be cut not longer than 1.5mm at a maximum.
- (3) To check current, add 3VDC across battery terminal and diode anode. It must be less than 9μA.

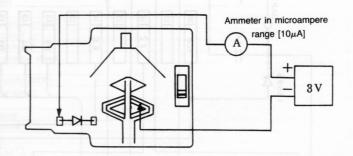


8. Parts signal layout chart

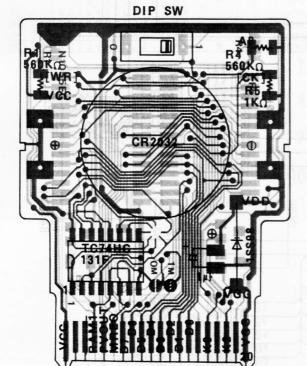

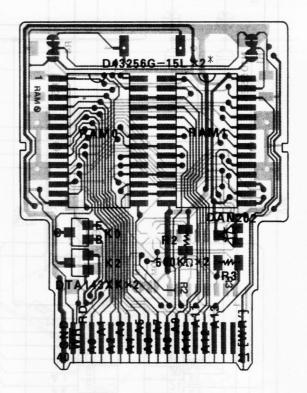


* : From '87 Feb. product, D43256G-12L

9. Circuit diagram anolluspend epivies .T

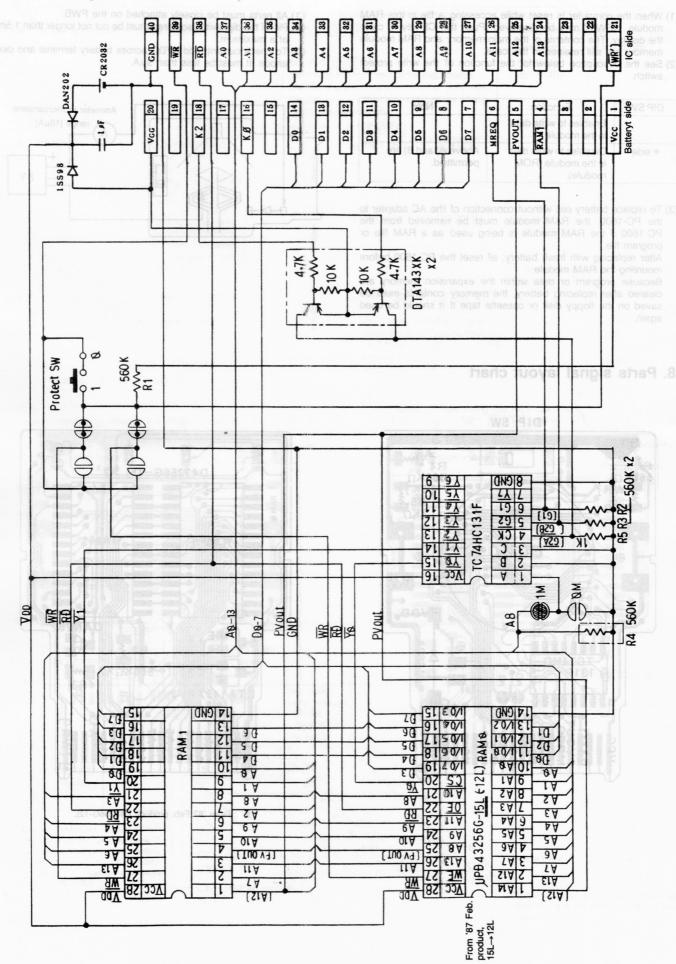

10. PARTS LIST & GUIDE

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION	
1	HDECA1007ECZZ	AB		D	Switch panel	
2		AA		С	Screw	
3	HDECA1006ECZB	AF	N	D	Panel(battery lid)	
4	PZETL1013ECZZ	AA		С	Panel insulator sheet	
5	PZETL1007ECZZ	AA		С	Battery sheet	
6	GCABB1003ECZZ	AC		D	Top cabinet	
7	PZETL1012ECZZ	AA		С	Battery insulator sheet	
8	QTANZ1002ECZZ	AB		С	Battery terminal \ominus	
9	QTANZ1001ECZZ	AB		С	Battery terminal +	
10	PZETL1010ECZZ	AA		С	Terminal insulator sheet	
11	PSLDC1010ECZZ	AB		C	Shield plate	
12	DUNTK1209ECZZ	BR	N	E	RAM PWB unit(64KB)	
13	PSHEP1011ECZZ	AB		С	Spring fixing sheet	
14	MSPRC1202CCZZ	AC		C	Spring	
15	GCABC2672CCZA	AD	N	D	Terminal cover	
16	GCABA1004ECZZ	AF		D	Bottom cabinet	
101	QSW-S1347CCZZ	AH		В	Slide switch	
102	RC-SZ1007CCZZ	AF		С	Capacitor (1µF)	
103	VHDDAN202K/-1	AB		В	Diode (DAN202K)	
104	VHD1SS98///-1	AD		В	Diode (1SS98)	
105	VHITC74HC131F	AH	N	В	IC (TC74HC131F)	
106	VHi43256G-12L	BD	N	В	IC (43256G-12L)	
100	VH i 4 3 2 5 6 G - 1 5 L	BD		В	IC (43256G-15L)	
107	VRS-TP2BD102J	AA		С	Resistor (1/8W 1KΩ ±5%)	
108	VRS-TP2BD564J	AA		С	Resistor (1/8W 560KΩ ±5%)	
109	VSDTA143XK/-1	AB	N	В	Transistor (DTA143XK)	
201	GCASP1091CCZZ	AE		С	Case	
202	GCASP1092CCZZ	AD		С	Case cover	
203	GFTAU1281CCSA	AB		D	Reverse side cover	
204	PPACG1001ECZZ	AE		С	Module separater	
205	TCAUH1002ECZZ	AB		С	Caution Card	
206	TCAUZ1003ECZZ	AE		С	Caution label	
207	TiNSL1126ECZZ	AL	N	D	Instruction book	
208	TLABZ1690CCZZ	AA		D	Switch cover label	
209	UKŌGD1009CCZZ	AC		С	Driver (+)	
301	SPAKA7307CCZZ	AC		D	Packing cushion	
302	SPAKC0265ECZZ	AK	N	D	Packing case	

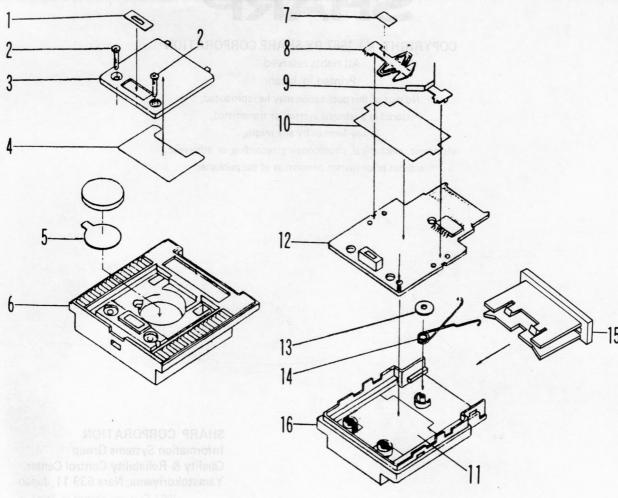

SHARP

COPYRIGHT © 1987 BY SHARP CORPORATION
All rights reserved.
Printed in Japan.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION Information Systems Group Quality & Reliability Control Center Yamatokoriyama, Nara 639-11, Japan

1987 February Printed in Japan §